

1.1 Default Configuration

. There are the low-level programmable default parameters:

Functionality	Hold <i>On/Off</i> key for 20s, 1 st parameter will appear (Up/ Down keys modify values) if K4, the key would then be econo or mode or quiet				
Duration	Press <i>On/Off</i> key to display next parameter, System will reset after last parameter				
Display	As table below, Default values in bold.				
Parameter	Display	Value of x			
Pump #1	P1 x	1 = Single Speed	2 = Dual speed		
Pump #2	P2 x	0 = Not install	1 = One speed		2 = Two speed
Pump #3	P3 x	0 = Not install	1 = One speed		
Blower	bL x	0= Not install	1= One speed	2= Two speed	3= three speed
Light	LI x	0= Not install	1=12 VAC (single-intensity)	2=12 VAC (three-intensity)	3=120 VAC 4= INTERNAL Fibber box
Ozone	O3 x	0 = not installed	1 = on only during Filter cycle	2 = always on	3= on with the circulation pump
Circulation Pump	CP x	0 = not installed	1 = regulated (with spa temperature)	2 = always on	3= Always on but off when 2 degree over set point
Filtration cycle	FC x	1 = filtration cycle enable		2 = Filtration cycle replaced by a purge cycle	
Pressure switch	PS x	0 = with pump one		1 = with the circulation pump (CP can not be at O)	
Time out output	To x	0=20 minutes	1=30 minutes	2=40 minutes	
Current pump #1	C1 x	Select the current of the pump#1 (1-15)			
Current pump #2	C2 x	Select the current of the pump#2 (1-15)			
Current pump#3	C3 x	Select the current of the pump#3 (1-15)			
Current blower	Cb x	Select the current of the blower (1-8)			
Current heater	CH x	Select the current of the heater (12-23)			