



Installation Guide

Circular Cubicle

Tools required (not supplied)

- Additional Paint Brush (wood floors only)
- Pencil
- Hard Point Saw
- Eye Protection
- Bucket
- Solvent Weld Waste Adhesive
- Measuring Jug
- Tape Measure
- Straight Edge
- Junior Hacksaw
- Breathing Protection
- Level
- Sealant Gun

Important Information

PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.

The waste pipe must run in the same direction as your floor joists so please check your joists before starting installation.

Check the pack and make sure you have all the parts listed.

If the shower tray (A) or shower tray extension (B) have slightly damaged edges there is no need to return the product as these can easily be repaired and most minor damage will naturally be covered during installation. Should you need to patch a repair that won't be naturally covered you should do so when you complete steps 16 and 17 in exactly the same way as you would seal a joint with waterproofing tape (L) and tape sealer (M).

DO NOT PLACE STEP LADDERS OR HEAVY ITEMS ONTO THE SHOWER TRAY (A) OR SHOWER TRAY EXTENSION (B) AS THIS COULD PUNCH A HOLE THROUGH THE SURFACE.

Certain spare parts and additional components are available if necessary and these can be obtained by calling the help line number at the end of the instructions.

When you are ready to start, make sure that you have the right tools to hand and that the installation area is clean and dry.

When drilling or fixing into walls or floors it is essential that you check for pipes and wires before commencing.

DO NOT CLIP THE WASTE INTO POSITION WITHIN THE TRAY UNTIL INSTRUCTED TO DO SO IN THE INSTRUCTIONS THAT FOLLOW; THE WASTE CLIPS INTO THE TRAY SECURELY AND IS NOT DESIGNED TO BE REMOVED, THEREFORE THIS MAY CAUSE DAMAGE TO THE TRAY LUGS AND/ OR WASTE IF THIS WARNING IS IGNORED. AQUADRY CANNOT BE HELD LIABLE FOR ISSUES ARISING DUE TO DAMAGE CAUSED IN THIS WAY.

Site Preparation

All floor types need to be clean, dry and dust free.

All floor types need to be as flat and level as possible.

Floor boards must be securely fixed down prior to installation.

All derivatives of wooden floors need to be treated with the wood floor primer (O) prior to installation. **PVA MUST NOT BE USED IN PLACE OF THE WOOD FLOOR PRIMER (O).**

This product is not suitable for use on MDF.

Prior to installation you will need to have access to a wastepipe in the correct position. Please ensure that the wastepipe is accessible and any alterations to the floor are completed prior to installation.



Step 1

Lay the shower tray () into the required position. Through the drain in the shower tray () mark the floor to show where the drain will sit (in order to get your plumbing in the correct location) Carefully remove the shower tray () and store somewhere safe.



Step 2

Remove flooring as necessary to carry out works to the wastepipe. Please note that if there is a joist in the way of the shower drain base () you will need to consult a professional joiner or structural engineer for advice.

Handy Hint: The Cubicle can be installed with a Substrate Element which is available to purchase separately through your retailer. The Substrate Element will raise the tray an additional 80mm and is used where your waste and wastepipe cannot be located with the floor joists.




Step 3


For water to drain away properly, the wastepipe must have a fall of at least 3cm per metre. Make any alterations to your wastepipe to meet the position marked in step 1. The wastepipe must be properly supported to hold its own weight and that of the shower drain base (). Spread solvent weld adhesive around the inside of the shower drain connector (). Push the shower drain base () onto the shower drain connector () with a twisting action. Spread solvent weld adhesive around the inside of the opposite end of the shower drain connector () and then slide onto the wastepipe with a twisting action. Once the solvent weld has set; pour water down the drain to check that the waste is not blocked and that there are no leaks. Replace the flooring ensuring that an adequate hole has been cut to allow for the shower drain base () to be exposed through the floor. Smear some lubricant () around the black rubber seal on the shower drain base (). Please note: The hole size should be no bigger than 180 x 180mm.



Step 4
Primer...

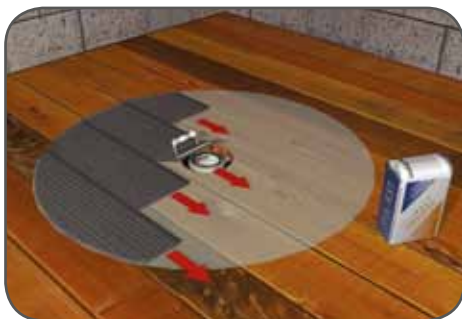


Step 5
Put on the protective gloves () and wear eye and breathing protection. Mix the bag of board fixing adhesive () according to manufacturer's information to achieve a stiff consistency. Spread the board fixing adhesive () onto the floor of the shower position and drag the notched adhesive trowel () across the surface. The notched adhesive trowel () will make a ribbed pattern which will leave just the right amount of adhesive on the floor.

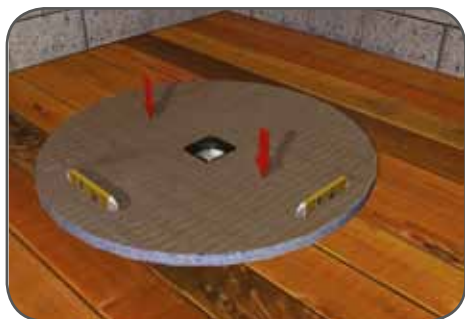

Step 6
Place the shower tray () into position and bed down onto the adhesive cement. Check that the shower tray () is level in both directions using a suitable level.




Step 7
Put your fingers through the drain hole in the shower tray (). Push down on the shower tray () and pull the shower drain base () upwards until it clicks into place into the drain hole in the shower tray ().

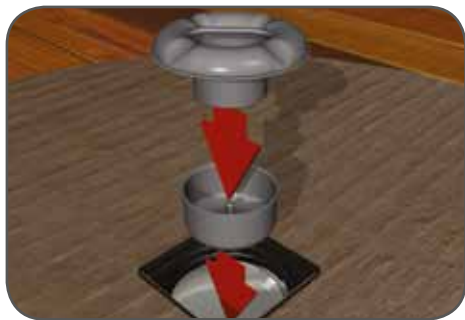

Step 8

Ease the shower drain internal bowl () into the shower drain base (). Ease the shower drain internal dome () into the shower drain base (). When you have finished you can remove the protective gloves () and eye and breathing protection.

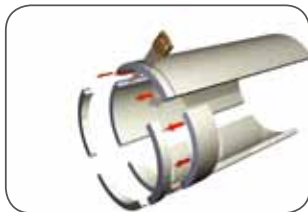


Step 9

Using a tape measure, measure the distance between the surface of the shower tray and the ceiling. We recommend that you take an additional 5mm from your measurements so that the assembly can be lifted into position more easily. Carefully mark the cut position on each wall section (), () & () using a pencil and straight edge. Cut the sections carefully using a hard point saw.

IMPORTANT NOTE: The vertical assembly opening has a strengthening (clear plastic) strip at one side to help support the shower door profile/hinges. Please ensure that you flip the assembly to the correct orientation for your application, i.e., door swing. We strongly recommend that you make note of which side the strengthening strip has been installed as this will not be evident once the cubicle has been tiled.

If you plan to install your Cubicle with the optional Flat Roof, available to purchase separately through your retailer, you may wish to skip this step and immediately follow Step 10 before then gluing the Flat Roof into position using a thin wavy line of sealing & mounting adhesive.

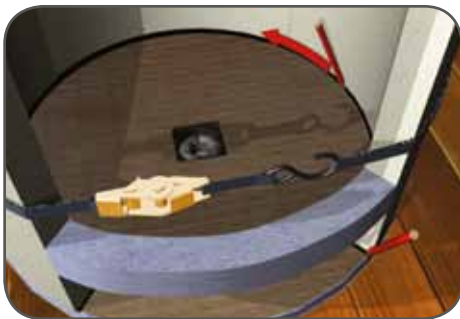


Step 10

Offer the vertical assembly into place on top of the shower tray with the header () and sacrificial footer () helping to keep the assembly shape. Hold the assembly in place using ratchet straps. Note: Do NOT glue the vertical sections together at this stage. Using a pencil, mark around the inside of the vertical assembly on the shower base and at the point where it meets the ceiling*

*If you are installing the Flat Roof option you will not need to mark the ceiling.

Remove the ratchet straps then set the vertical assembly to one side. Apply a thin wavy line of sealing & mounting adhesive within the marks you made previously as shown.

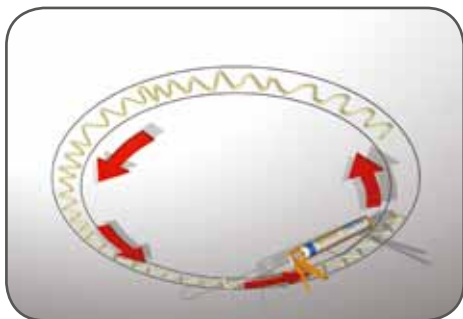

Step 11

Assemble the shower wall assembly adhering the first section into place. Apply a thin wavy line of sealing & mounting adhesive across the vertical side of one tongue and groove section then offer the next section into place and apply gentle pressure to bond the sections together. Repeat for each of the three sections that make up the shower wall. Next, adhere the Top Header () to either side of the opening with a thin wavy line of sealing & mounting adhesive. Ensure that the Top Header is held in position with a long screw fixing either side as shown.





Step 12

Take the sacrificial footer () and position it at the base of the assembly. IMPORTANT: Do not glue this into place; this is only a temporary piece to ensure that the assembly maintains its shape whilst the adhesive is drying. Ensure that the vertical assembly is perfectly round and that it matches the shower tray diameter; Ensure that the walls are level and that the opening size is square by measuring at various points of the opening, making sure the dimensions remain constant. We recommend using ratchet straps at the top and bottom to help maintain the shape whilst the adhesive cures. Allow the sealing & mounting adhesive to set for approx. 3 – 5 hours.



Step 13

Run a bead of sealing & mounting adhesive () where the vertical assembly () meets the shower tray base (). The ratchet straps can now be removed, and the sacrificial footer () can be disposed of.

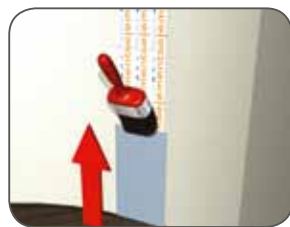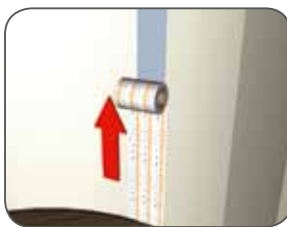

Step 14

From the roll of waterproofing Tape () measure and cut two vertical lengths to the height of the vertical assembly. Put on the protective gloves () and wear eye and breathing protection. Put on the protective gloves () and wear eye and breathing protection. Using the tape sealer () and paintbrush (), apply a thin layer of tape sealer () where the vertical sections meet one another, slightly wider than the Waterproofing Tape width. Bed the Waterproofing Tape () into the tape sealer () then apply a further thin layer of tape sealer () over the Waterproofing Tape (). Repeat this for the second joint.

Optional Decor Trim Set available to purchase separately

If you have purchased the optional décor trim set, these can be glued into place using sealing & mounting adhesive. Allow the sealing & mounting adhesive to set for approx. 3 – 5 hours.

PLEASE NOTE: The Décor Trim Set is not suitable for installation with the Curved Frameless Glass Door.

Important Tiling Advice

IT IS ESSENTIAL THAT YOU DO NOT USE A READY MIXED TILE ADHESIVE.

FLEXIBLE CEMENT BASED POWDERED ADHESIVE MUST BE USED WITH SHOWER CONCEPT TRAYS.

The shower tray (A) has slopes towards the drain pre-formed into the tray and these must be maintained when tiling as does the slope on the shower tray extension (B).

If you use tiles that are larger than 100mm it is necessary to cut the tiles along the same lines as are pre-formed into the shower tray (A) to maintain the slope. For best results and ease of installation we would recommend mosaics or tiles of 50mm to 100mm.

These shower trays are perfect for use with electrical under tile heating due to its excellent thermal properties. It is however essential that you check with the manufacturer that their product is entirely suitable for the area that you intend to install it in. If you are installing under tile heating it is essential that you consider any areas that will need products fixed to the floor for example shower screens. Avoid installing under tile heating directly below any fixing point to avoid the risk of screwing through the heating.



Step 15

Place the disposable tiling aid () into the shower drain hole on the shower tray (). The tiling aid () provides the edge that needs to be tiled up to whilst protecting the drain from debris.



Step 16

After tiling the shower tray the shower drain top () can be fitted. Gently place the shower drain top () into the shower tray (). Measure from the top of the finished tile to the top of the shower drain top (). From the opposite end/bottom of the shower drain top () mark the same distance as previously measured. Using a hard point saw, cut the excess from the bottom of the shower drain top (). Depending on your cutting skill, it may be necessary to file or sandpaper the cut edge to make it completely flat.



Step 17

Place a small blob of tile adhesive in the middle of all four sides of the shower drain hole in the shower tray (). Gently ease the shower drain top () into position in the shower tray (). Leave to set for approximately 3 to 5 hours.



Step 18

Fill the gap between the edges of the shower drain top () and the start of the tiles with the same grout used during tiling. Place the shower drain finishing grate () into position. Leave to dry for at least 24 hours before using the shower.

Optional Curved Frameless Glass Door (available to purchase separately)

Please refer to the instructions that are supplied with the door for specific fitting instructions.

PLEASE NOTE: As discussed in Step 8, there is a strengthening strip in one side of the cubicle; please ensure that the brackets are fitted to this side to support the weight of the glass door.

Due to our commitment to continuous product development we reserve the right to alter specifications without notice. Products are guaranteed against manufacturing defects for the first purchaser only and the guarantee is non-transferable. Our liability under any guarantee expressed or implied is strictly limited to replacement of defective goods or a refund at our discretion and no consequential losses will be entertained. Proof of purchase will be required.